

The following photos should help you re-orient the latch pins on your Mini 12 & 16 cabinets



Starting with the back of the door and the center screw removed from the lock assembly, the cam, rods and back of lock assembly should look like this.



Position the key in locked position. Key should be straight up and down.



With the rods located inside of the nylon guides top & bottom, position the cam and locking rods so they resemble those in the photo, in a straight line. At this point make sure the the rods are protruding through the top and bottom of the door.

Position the cam onto the square pin on the back of the lock assembly and insert the screw and tighten.



Turn the key 90 degrees to the unlocked position and check that the rods are flush or slightly recessed into the door to allow it open.